


version 04

# batmonitoring.org

## How to update the AudioMoth firmware

1. Download and install the App "AudioMoth Flash" for Windows, Mac or Linux:


[www.openacousticdevices.info/applications](http://www.openacousticdevices.info/applications)

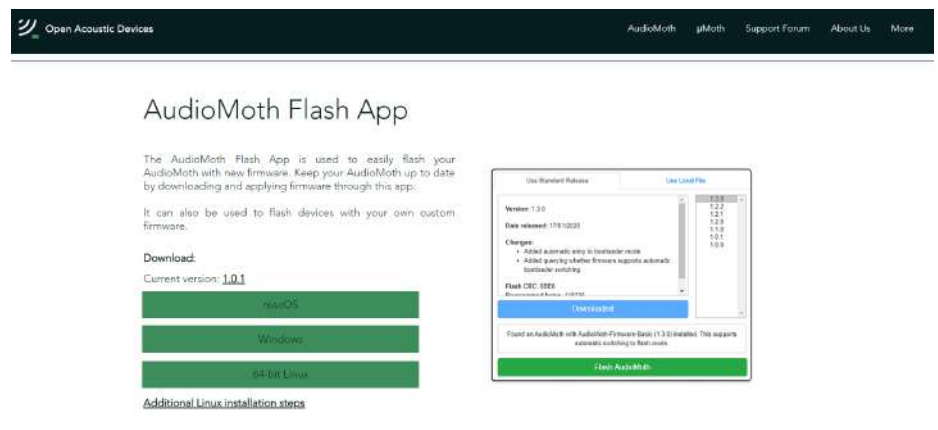

2. If you get a warning message, click on *More information* and then *Run anyway*.



3. Open the App that you already installed and download the last firmware version by clicking on *Download*.

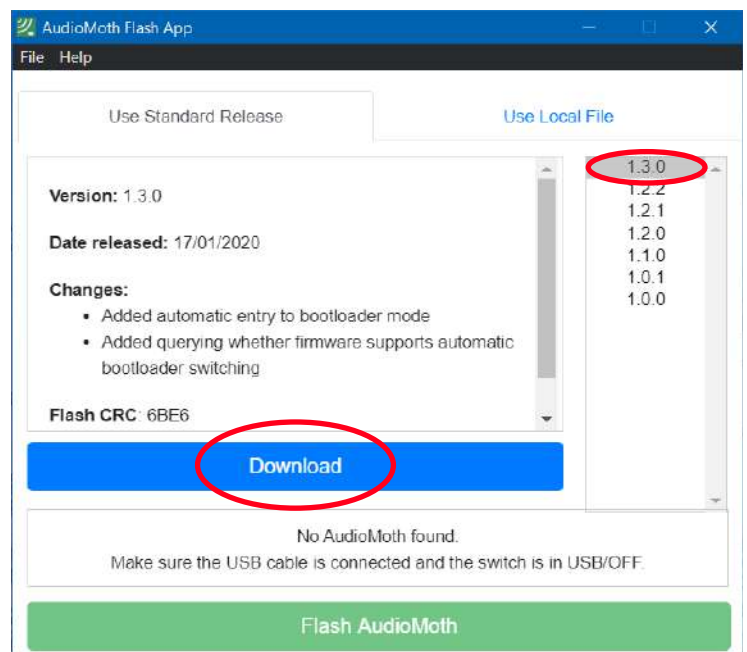


version 04


# batmonitoring.org

## How to update the AudioMoth firmware

4. After the download, you will get a confirmation message.

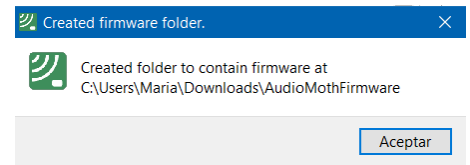

5. Connect the AudioMoth WITHOUT BATTERIES and the switch in USB/OFF position. Then, you will get a message confirming that your AudioMoth has been detected and its current firmware version (*Found an AudioMoth with AudioMoth-Firmware-Basic (1.X.X) installed. This supports automatic switching to flash mode*).

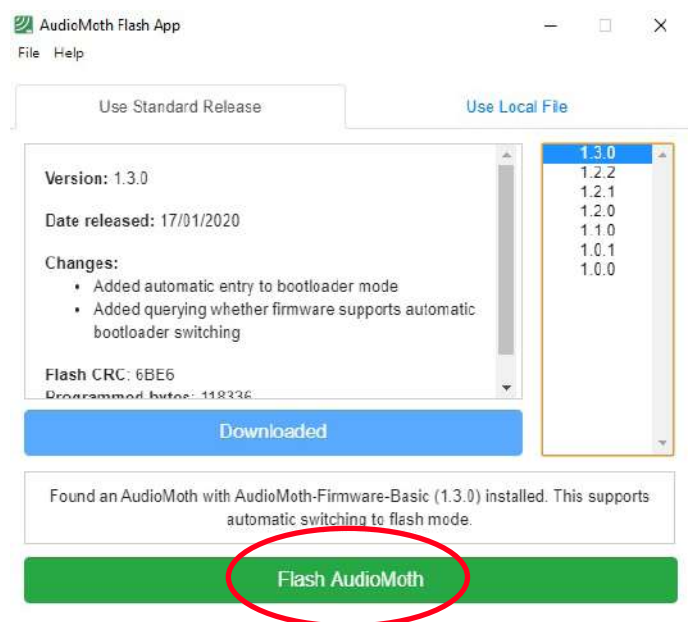


6. Click on the last version (it is already downloaded)

## ATTENTION!

If it does not work or the AudioMoth is not detected:

1. Connect the AudioMoth WITHOUT BATTERIES and the switch on CUSTOM position.
2. Connect the two contacts with a paperclip as in the figure
3. You will get the message: *"Found an AudioMoth in flash mode"*

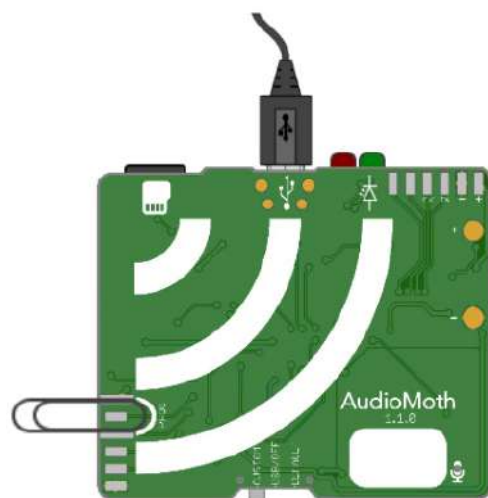

7. Click on *Flash AudioMoth*

8. A confirmation message should pop up.

